

Using Your Changer

Optional Positions for Using the Changer

Option A (Taller User)



Stand behind the change; support plate facing away from body. Place 1 or both feet on the horizontal changer legs.

Option B (Shorter User)



Stand in front of changer, support plate facing body. Place 1 or 2 feet on the changer's horizontal legs.

Mounting Tires

Step 1



Hold the tire in both hands at a 45° angle to the rim. Press the outside bead of the tire onto the rim. If it does not slip on easily, Press with full body weight and twist. A lubricating spray can be used, but is not necessary.

Step 2



Place the installer/removal tool over the mounting rod. Apply downward force. Make sure the mounting shoe is placed securely under the lip of the rim. Twist the tool. The 2nd bead of the tire will spiral onto the rim. You may wish to hold the tire in place with the other hand.

Dismounting Tires

Step 1



Collapse 1 side of the pressing on it. This will create a gap between the opposite side of the tire and the rim. Insert the tool end in the gap. The indentation in the plastic end should sit between the rim and tire. Holding the tire in place with the opposite arm (optional) apply downward force on the tool while twisting. The 1st tire bead will slip over the rim edge.

Step 2




Place the tool end in between the bottom tire bead and the upper edge of the rim. Holding the tire in place with the opposite arm (optional) apply downward force on the tool while twisting. The 2nd bead will slip over the rim edge.

Installer/Remover Tool Diagram



Tire Changer Diagram

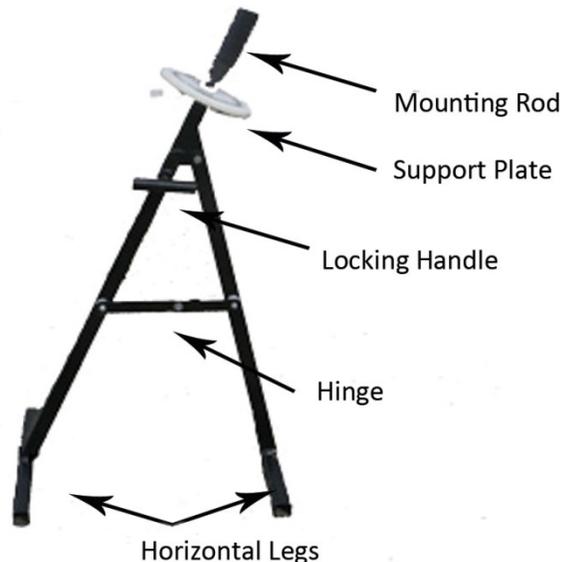

Occasionally use a lubricating spray on the locking handle to prevent galling of the screw threads.

There are 2 optional adapters which can be purchased for the changer. 1) an adapter for mounting spool wheels. 2) a second installer/remover tool for use with other dimension rims. Tools are available for 5 inch and 6 inch diameter rims.